

**USE SPREADER  
BAR TO PUSH  
OUT IN RIB # 4  
AREA, BEFORE  
ASSEMBLING  
RIBS # 3, # 5 AND #  
4. FAILURE TO  
DO SO, MAY  
CAUSE DAMAGE  
TO GUNWALES.**